



Pos.	Artikelbeschreibung	Description of item	Artikel Nr./ Item No.	Listenpreis/ List price
1	Gehäuse	Housing	01002021	33,20 €
3	Elektronik m. Potentiometer	Electronics w. potentionmeter	01002016	10,70 €
4-6	Knebel m. Skala	Knob w. scale	01002013	4,30 €
7	Blende, links	Left panel	01002019	10,70 €
8	Hauptplatine	Mainboard	010020110	16,00 €
9-10	Knebel z. Auswurf	Lift knob	01002012	3,10 €
11	Arretierung m. Befestigung	Lock w. fixing	E01002021	0,70 €
13	Stopfen, Gummi	Stopper, rubber	01002011	3,10 €
15	Zugentlastung	Strain relief	010020116	6,40 €
16	Bodenplatte	Bottom plate	01002022	8,00 €
17	Anschlussklemme	Terminal clamp	010020113	1,30 €
18	Blende, rechts	Right panel	010020114	10,70 €
19	Leiste	Panel	010020115	5,40 €
20-21	Krümelschublade	Crumb tray	01002014	6,40 €
24-27	Brötchenaufsatz	Warming rack f. toaster	01002015	8,00 €



**Toaster, 4 Scheiben
Artikel-Nr.: 100202**

**Ersatzteilliste
23.06.2014**